
Transfer Car Scales

Description:

The transfer car scale weighs ladles, pots and scrap buckets. Scales are designed to fit existing or new cars with weigh modules containing double-ended shear beam load cells.

Options:

- R.F radio data transmission to remote locations
- Remote calibration through R.F. radios
- Scoreboards, printers, computer interfaces
- Touch screen, PLC and digital control systems
- Custom scrap ingredient batching programs

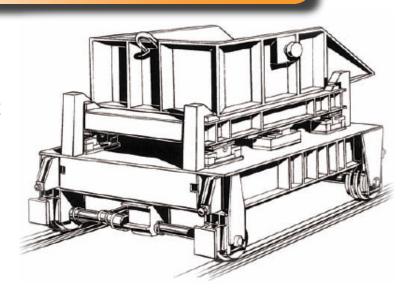

Specifications:

- Scrap bucket, ladle, pot alignment weighbridge
- Flexure plate checking system
- Floating load cell bearing assemblies
- Double-ended shear beam load cells
- Digital weight intstrument

